
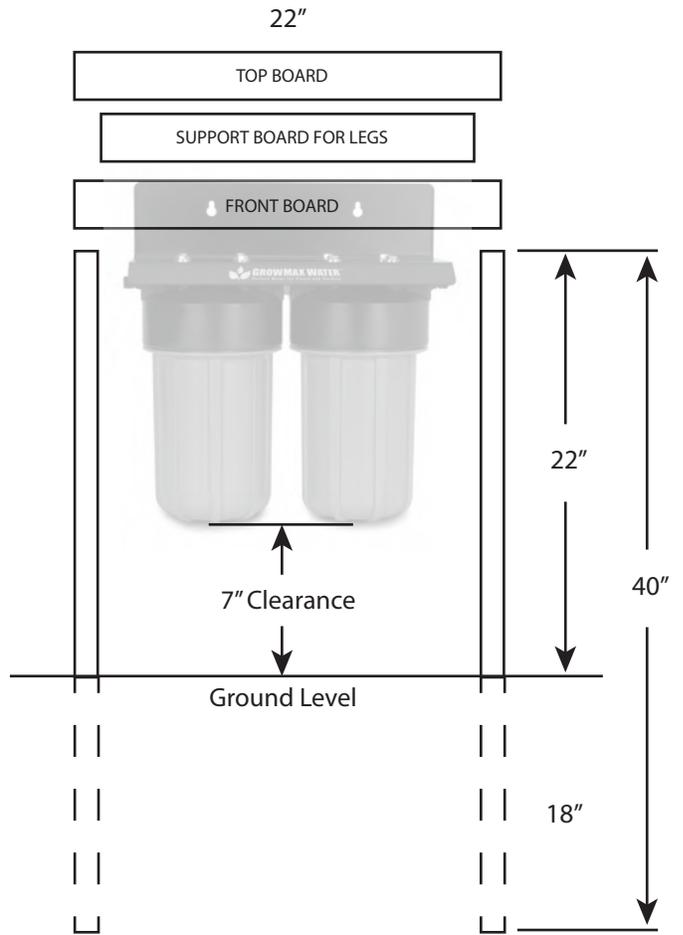


# Mounting Support Construction for Super Grow 800

Here is an easy-to-build design for use when plumbing your Super Grow 800 into your existing irrigation system using 2x4's and wood screws.

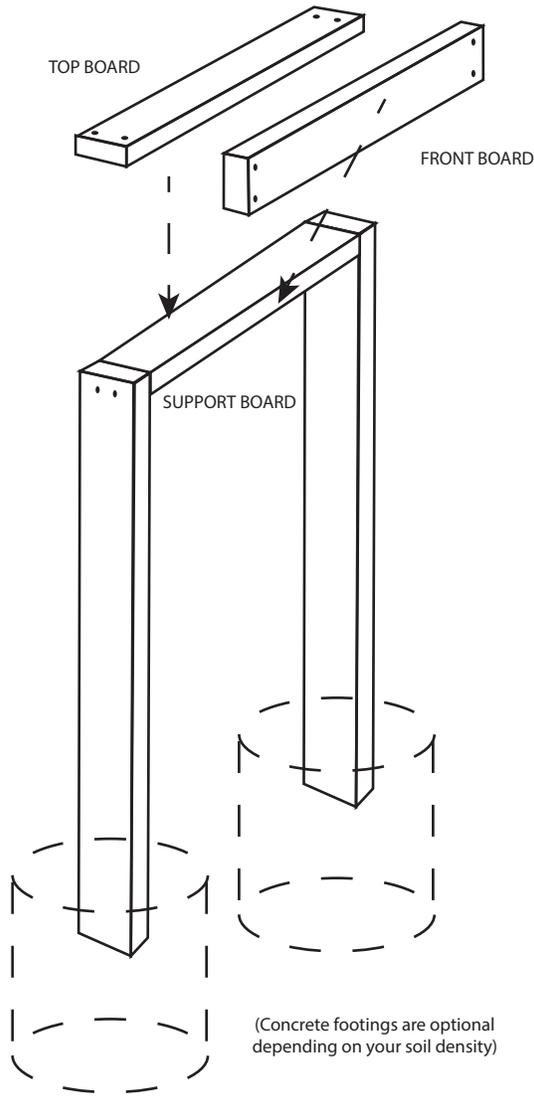

Mount unit using large 2" wood screws

**NOTE:** If you need to have the inlet on the left and the outlet on the right, you can flip the housing bracket around to achieve this.



Optional NPT to 3/4" connector

